

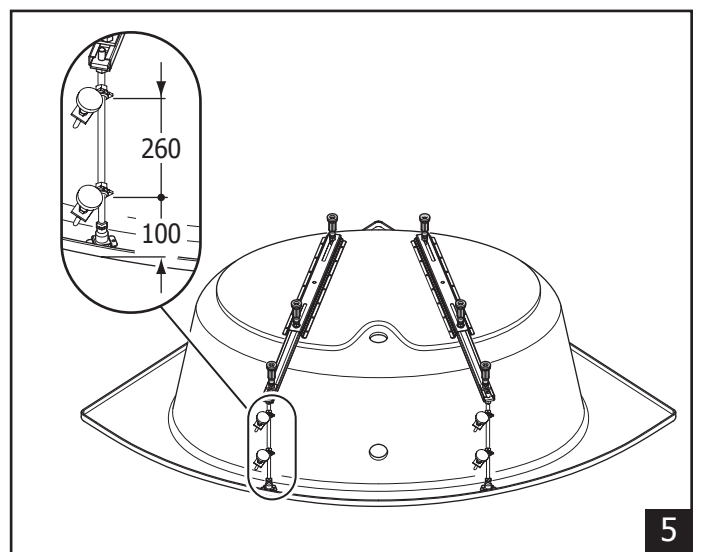
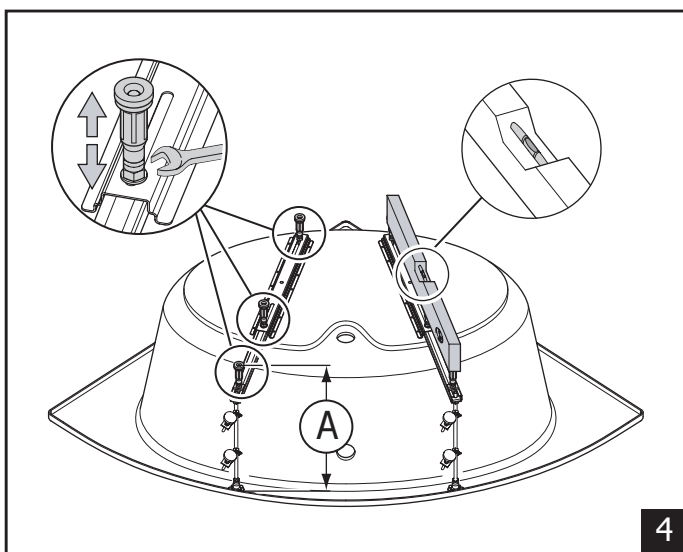
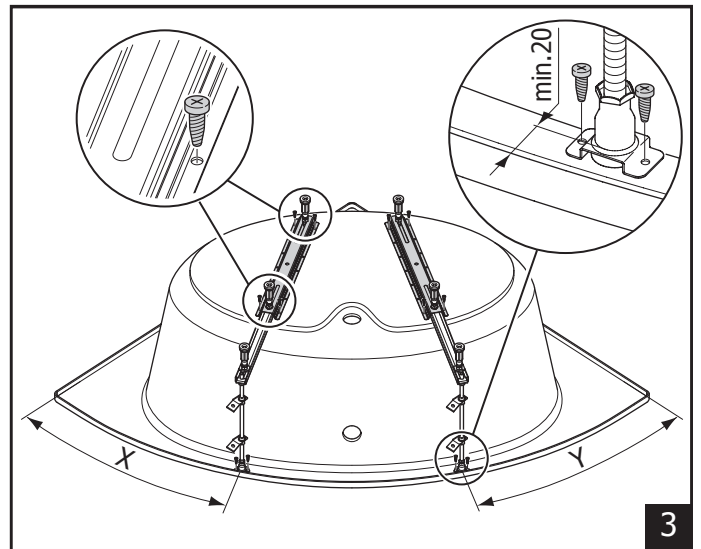
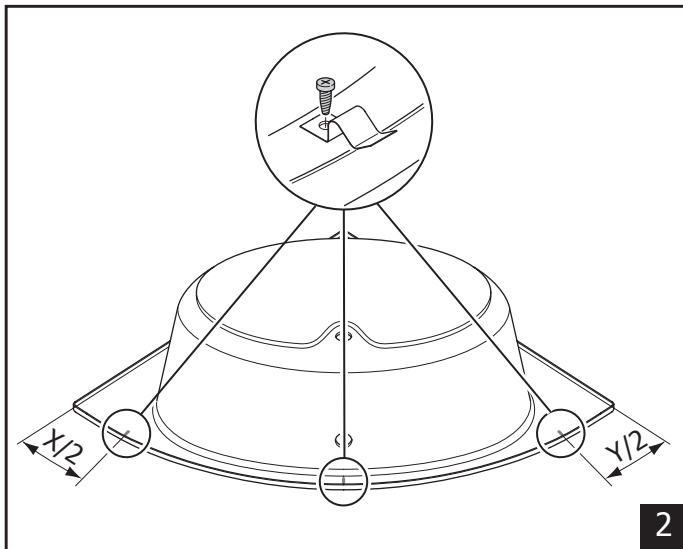
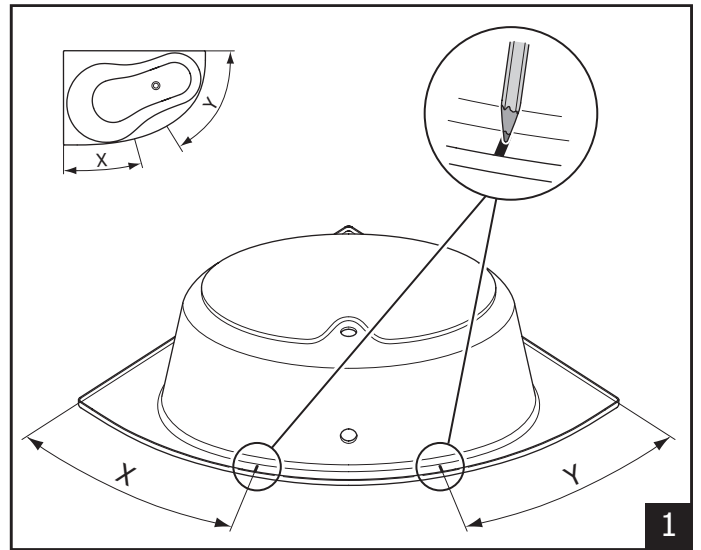
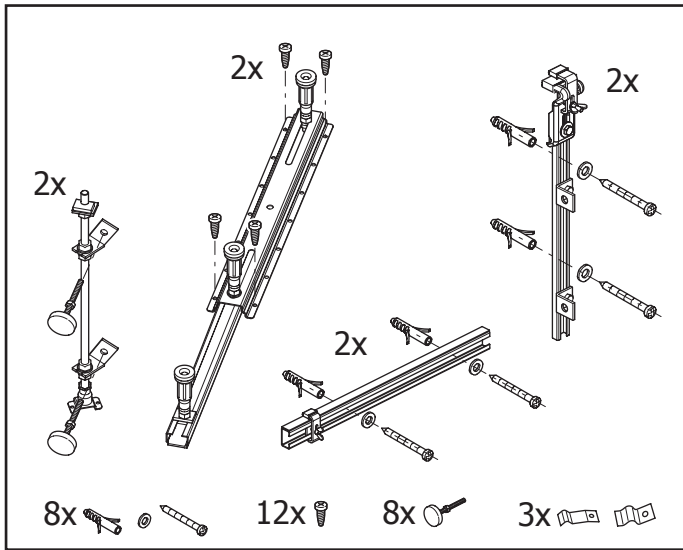
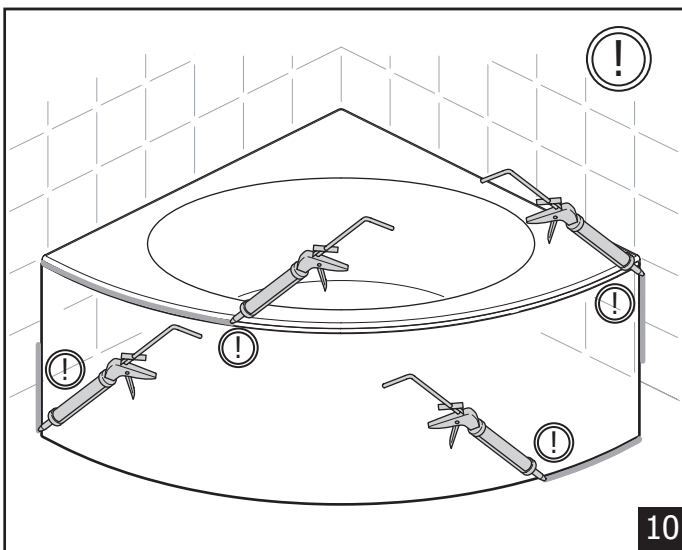
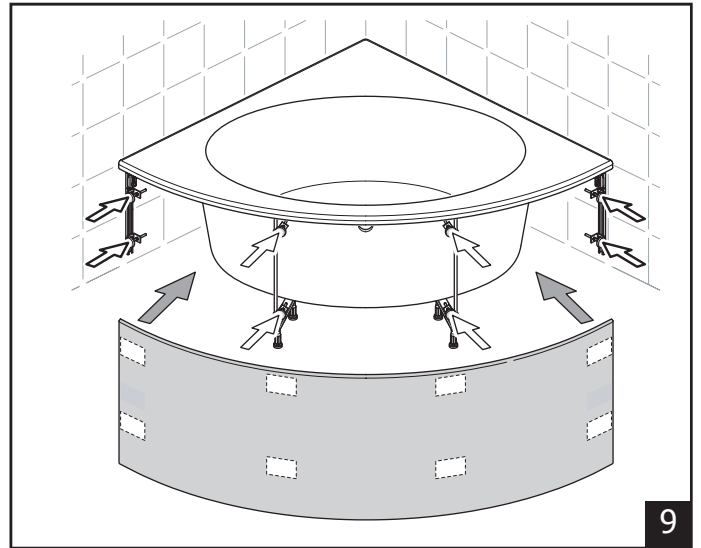
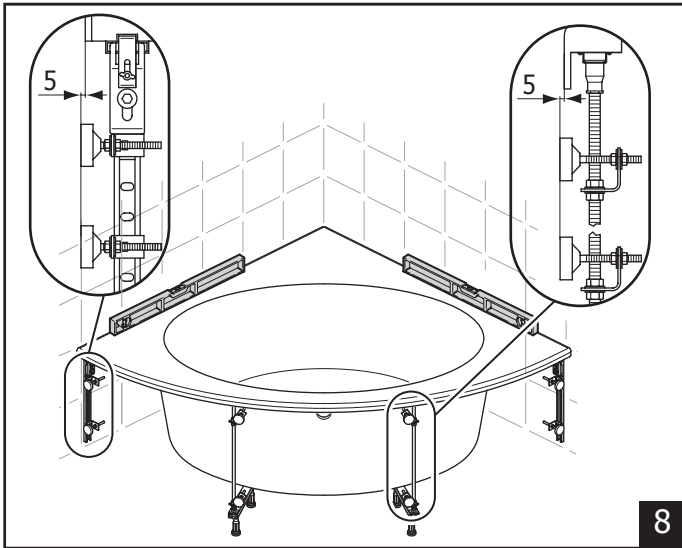


Montageanleitung für Wannen mit Schürze

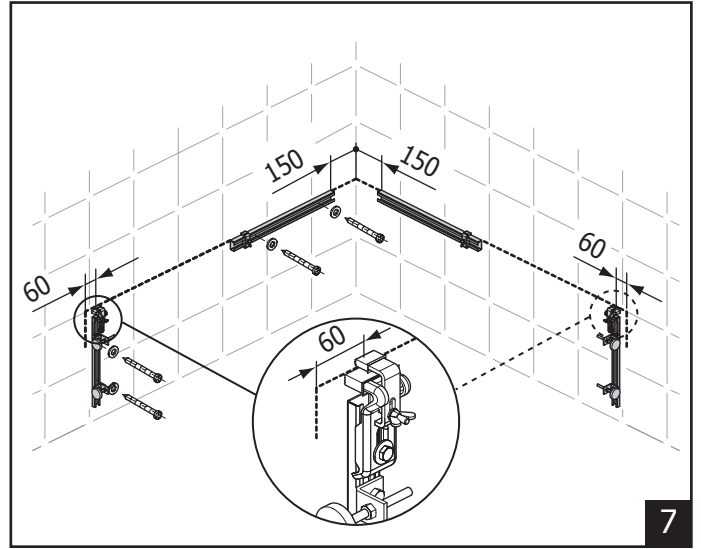

Montageanleitung für Wannen mit Schürze

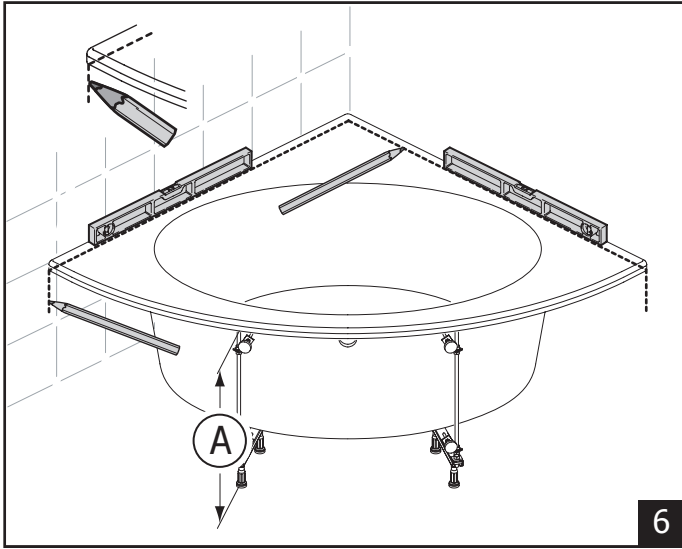

		A	X	Y
Aqua	140x140cm	593	800	800
Isabella	160x160cm	603	850	850
Isabella	150x150cm	603	850	850
Isabella	140x140cm	603	800	800
Isabella	130x130cm	603	800	800
Sanibell	140x140cm	593	800	800
Sanibell	150x150cm	593	800	800
Aqua	150x100cm	593	700	700
Surf	160x 90cm	573	620	760
Playa	160x 90cm	555	470	470